


INSTALLATION IN 4 EASY STEPS


STEP 1:

Remove Jack-it from box. Lift left tab on the oval decal as shown. Do not unroll Jack-it from the tube.

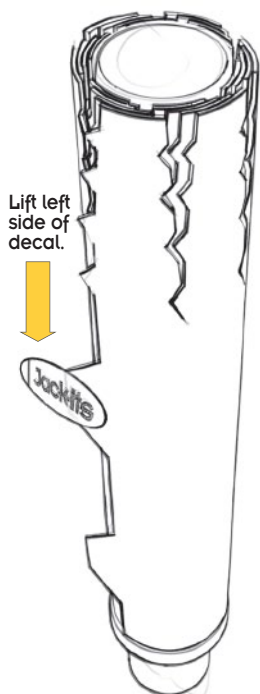


STEP 2:


Place tank on a flat surface in a comfortable working position (waist-high recommended). Place rolled Jack-it by the tank and attach the decal to the tank (keeps Jack-it in place as you unroll). Slowly unroll the Jack-it around the tank, keeping the bottom of the cardboard tube flat on the work surface.

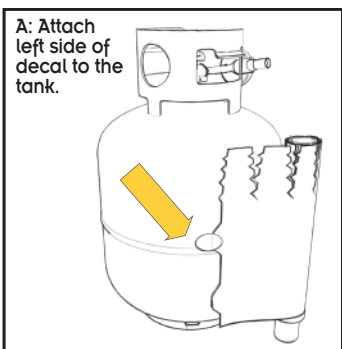



A: Attach left side of decal to the tank.

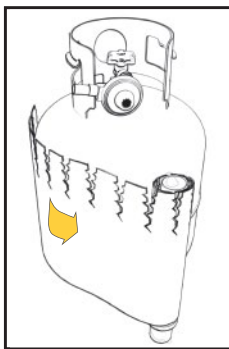

B: Attach magnet by carefully unrolling it around tank body. Keep bottom of tube flat on ground while unrolling.

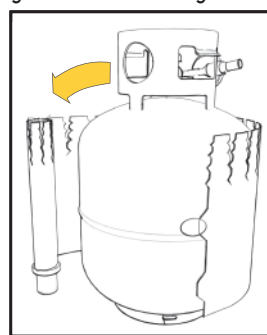


C: Save roll for future storage and re-mounting. Remove oval decal, if desired. Smooth out wrinkles and bubbles by running hands along Jack-it from front to back. Note: it is normal to have a gap remaining on the backside.

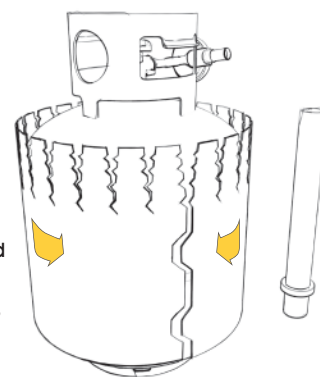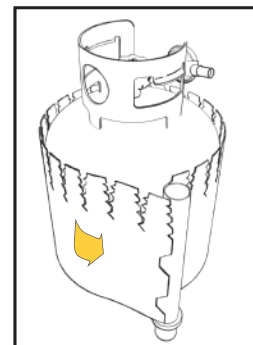


STEP 3:

Press top "fingers" of your Jack-it into place around the top shoulder of the tank. Adjust as needed to make a neat fit. The magnet will tighten the Jack-it to the tank over night, so you do not have to be perfect. Jack-its can be removed, repositioned and re-used over and over.

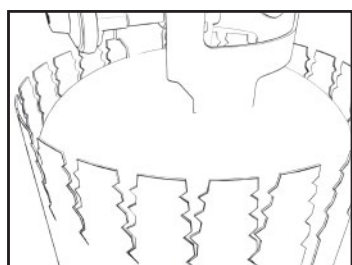


STEP 4:

Enjoy your new Jack-it! Be sure to brag about it to everyone you know.

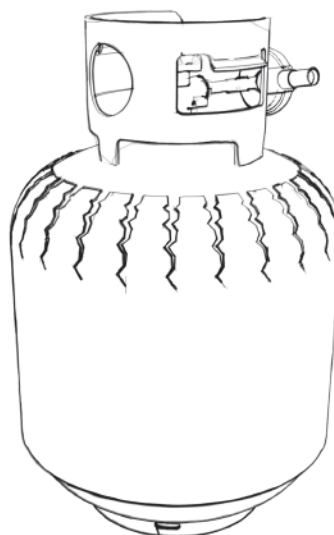


TROUBLESHOOTING:

Occasionally one or more of the "fingers" of the Jack-it may be a little stiff and resistant to making a magnetic bond on the first attempt at mounting.

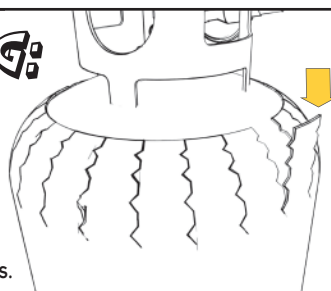

If this occurs, gently bend the problem Jack-it "finger" with a rolling motion. Do not do a complete fold. A small amount of pressure will loosen it. After it has been rolled, press down and hold on the shoulder of the tank & it will adhere.

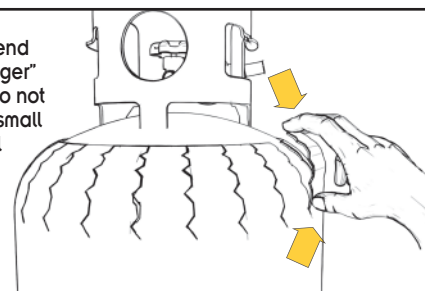

*Refer to www.jackits.com for further mounting tips.